



Congratulations and Welcome!

Whether this is your first time changing tires, or you're a seasoned mechanic, take the first step to mastering the No-Mar technique now and visit our Video Library to view our latest instructional videos:



NoMarTireChanger.com

Our Video Library is the single most important resource available for:

- Tire Changer Assembly
- Tire Changing Technique ("How To...")
- Avoiding Common Mistakes ("How NOT To...")
- Keeping Wheels Scratch-Free
- Saving Money by Maximizing Consumable Life





Cycle Hill® HD Motorcycle Tire Changer Assembly Introduction

Assembly Preparation

We recommend unpacking and assembling your tire changer in the following order:

1. Box **A** - Mount/Demount Bar (save 5/32" Hex ("Allen") Wrench for use with Box **E**).
2. Box **E** - Stand Assembly (if you will be using our Hitch Mount instead of the stand post, see the separate instructions provided with the Hitch Mount. You will still need the 3/16" Hex ("Allen") Wrench from the Stand Assembly box to complete tire changer assembly.)
3. Box **F** - Frame Assembly

Each of the sub-assembly boxes noted above has its own set of instructions included.

Assembly Notes and Tips:

1. All set screws (sometimes called "grub" screws) and select other screws have been pre-installed in their specified locations at the factory to aid in identification and assembly.
2. Some screws may be more difficult than others to turn in due to excess powder coating residue in the threads. In these cases, a drop of oil or other lubricant (such as WD-40®) can aid in installation, as well as partially tightening and then loosening gradually until the screw is completely fastened.
3. We **strongly** recommend using only the provided Hex ("Allen") Wrenches to install/tighten hex-drive screws, and hand tools (ratchet or combination wrench) for other bolts. Using power tools (even battery powered) can cause threads to strip or hex sockets to round out.

Tools Required for Assembly:

- 5/32" Hex (Allen) Wrench - Included in Lube Box inside of Box A
- 3/16" Hex (Allen) Wrench - Included inside of Box B or E (depending on model)
- 3/4" (or 19mm) Wrench - Socket w/Ratchet, Combination or similar
- 7/16" (or 11mm) Wrench - Socket w/Ratchet, Combination or similar
- 1/2" (or 13mm) Wrench - Socket w/Ratchet, Combination or similar

For mounting your Tire Changer to the floor, we recommend using 1/2" x 3+1/2" (or 12mm x 100mm) Concrete Wedge anchors (Power-Stud+® SD1 or similar) drilled to a minimum depth of 2+3/4" (or 70mm) and installed per manufacturer directions with nuts and washers.

Help & Support

If you have any difficulty assembling your tire changer or changing tires, the instructional videos on our website are extremely thorough and helpful (and are also the primary method of learning how to change your own motorcycle tires). We also have an extensive Frequently Asked Questions (FAQ) page on our website for common tire changing issues.

If you require further assistance or technical support, please call us at 888-98-NOMAR (888-986-6627) and we will be happy to assist you!



Cycle Hill® HD Frame Box 'F' Assembly Instructions

Hardware Pack Contents:

a. (12) 1/2" Flat Cap Screw



b. (3) 1" Hex Bolt



c. (3) Flat Washer




Step 1:

Remove all items from the box and remove any wrapping/strapping from components in the box.

Step 2:

Attach all 3 Frame Arms together using 2 "Y-plates" as shown. The bottom Y-plate has a welded cup, and the top Y-plate has an open hole. Using the 3/16" Hex Wrench from the stand box, install 6 Flat Cap Screws (a) on top and 6 screws (a) on bottom (leave screws loose until all 12 screws are threaded in place). The single threaded boss on each frame arm must face downward. Note the orientation of the front left frame arm as indicated by the wheel size decal. Tighten screws in an alternating pattern from the inside to outside.

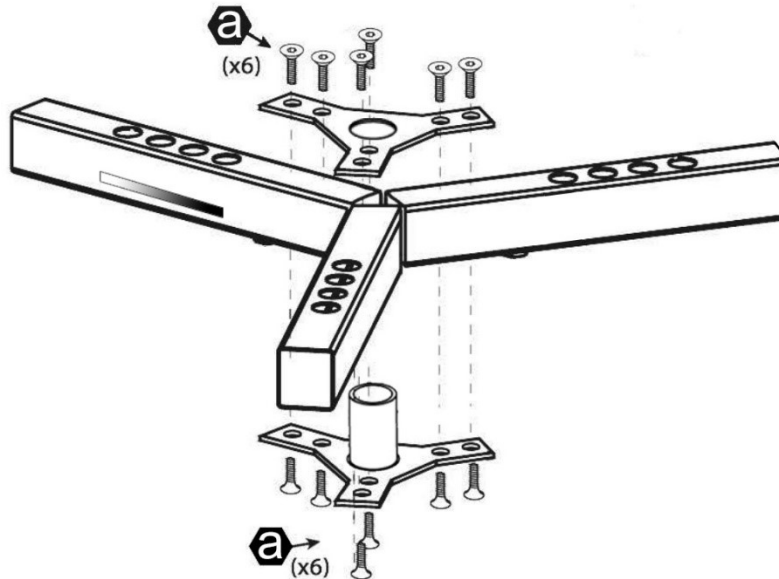

Step 3:

Place the completed frame arm assembly on the triangle of the Stand Post or Hitch Mount and align the three holes in the triangle with the three threaded bosses on the frame arm. The rear frame arm should align with the rear "point" on the stand post triangle.

Step 4:

Install a Flat Washer (c) on each of the 3 Hex Bolts (b). Thread each Hex Bolt with Flat Washer through holes in the Stand Post or Hitch Mount triangle into the threaded boss on each frame arm by hand. Once all 3 Hex Bolts are started, tighten with a 3/4" (19mm) wrench.

Step 5:

Install wheel clamps on to the frame arms per the instructions included inside of the Posi-Clamp® box.

Congratulations, your assembly is complete and your tire changer is almost ready to use! Once your tire changer is securely mounted to the floor or our Hitch Mount, you're ready to change tires! Ride safe!



Cycle Hill® HD Frame Box 'F' Assembly Instructions



Note regarding Center Post Selection: The three (3) included center posts are approximately 1/2" (13mm), 3/4" (20 mm), and 1" (26mm) wide. Use the largest center post you can fit through the bearing or opening in your wheel for maximum leverage when mounting and demounting tires.

